

Yokogawa DXP Driver

© 2025 PTC Inc. All Rights Reserved.

Table of Contents

Yokogawa DXP Driver	1
Table of Contents	2
Welcome to the Yokogawa DXP Driver Help Center	4
Overview	4
Setup	5
Channel Properties – General	5
Tag Counts	6
Channel Properties – Ethernet Communications	6
Channel Properties – Write Optimizations	6
Channel Properties – Advanced	7
Device Properties – General	7
Operating Mode	8
Tag Counts	9
Device Properties – Scan Mode	9
Device Properties – Timing	10
Device Properties – Auto-Demotion	11
Device Properties – Tag Generation	11
Automatic Tag Database Generation	13
Device Properties – Device Configuration	14
Device Properties – Redundancy	16
Optimizing Communications	17
Data Types Descriptions	17
Address Descriptions	18
DXP100 Addressing	18
DXP200 Addressing	21
Error Descriptions	23
Address '<address>' is out of range for the specified device or register	25
Data Type '<type>' is not valid for device address '<address>'	25
Device address '<address>' contains a syntax error	25
Device address '<address>' is Read Only	25
Missing address	25
Device '<device name>' is not responding	25
Unable to write to '<address>' on device '<device name>'	26
Write allowed for admin level only	26
Write allowed for devices with math option only	26
Winsock initialization failed (OS Error = n)	27
Winsock V1.1 or higher must be installed to use the Yokogawa DXP Ethernet Device Driver	27
Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed. Check username and password	27
Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed. No more logins at this user level	27
Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login	28

not accepted. Choose username of 'admin' or 'user'
Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' respon-
ded with error '<error code>' 28
Index **28**

Welcome to the Yokogawa DXP Driver Help Center

This help center is the user documentation for Kepware Yokogawa DXP Driver. This help center is updated regularly to reflect the latest functionality and information.

[Overview](#)

What is the Yokogawa DXP Driver?

[Setup](#)

How do I configure a device for use with this driver?

[Optimizing Communications](#)

How do I get the best performance from the Yokogawa DXP Driver?

[Data Types Description](#)

What data types does this driver support?

[Address Descriptions](#)

How do I address a data location on a Yokogawa DXP device?

[Automatic Tag Database Generation](#)

How can I configure tags for the Yokogawa DXP Driver?

[Error Descriptions](#)

What error messages does the Yokogawa DXP Driver produce?

Version 1.032

© 2025 PTC Inc. All Rights Reserved.

Overview

The Yokogawa DXP Driver provides a reliable way to connect Yokogawa DXP Ethernet devices to OPC client applications; including HMI, SCADA, Historian, MES, ERP, and countless custom applications. It is intended for use with Yokogawa Data Acquisition and Data Recorder devices that support Ethernet TCP communications.

Setup

Supported Devices

DXP100
DXP200

Timing

Device timing properties are common to the server and described in the server help under [Device Properties - Timing](#).

Channel and Device Limits

The maximum number of channels supported by this driver is 100. The maximum number of devices supported by this driver is 1024 per channel.

Device ID

Yokogawa devices are networked using standard IP addressing. In general, the Device ID has the following format `YYY.YYY.YYY.YYY`, where `YYY` designates the device IP address. Each `YYY` byte should be in the range of 0 to 255.

Device Settings

The DXP unit should be configured with the Keep Alive function enabled. This allows it to drop the connection if there are no responses to periodic test packets at the TCP level. The Keep Alive function is set on the Communication (Control -Login Time out-) screen in Setup Mode.

Tip: When using passwords, user IDs, and/or usernames, the DXP unit should be in Key + Com mode for the OPC server to establish communications with the device. *For more information, refer to the Yokogawa DXP instruction manual.*

Channel Properties – General

This server supports the use of multiple simultaneous communications drivers. Each protocol or driver used in a server project is called a channel. A server project may consist of many channels with the same communications driver or with unique communications drivers. A channel acts as the basic building block of an OPC link. This group is used to specify general channel properties, such as the identification attributes and operating mode.

Property Groups General Write Optimizations Advanced	<table border="1"> <tr> <td colspan="2">[-] Identification</td> </tr> <tr> <td>Name</td> <td></td> </tr> <tr> <td>Description</td> <td></td> </tr> <tr> <td>Driver</td> <td></td> </tr> <tr> <td colspan="2">[-] Diagnostics</td> </tr> <tr> <td>Diagnostics Capture</td> <td>Disable</td> </tr> <tr> <td colspan="2">[-] Tag Counts</td> </tr> <tr> <td>Static Tags</td> <td>10</td> </tr> </table>	[-] Identification		Name		Description		Driver		[-] Diagnostics		Diagnostics Capture	Disable	[-] Tag Counts		Static Tags	10
[-] Identification																	
Name																	
Description																	
Driver																	
[-] Diagnostics																	
Diagnostics Capture	Disable																
[-] Tag Counts																	
Static Tags	10																

Identification

Name: Specify the user-defined identity of this channel. In each server project, each channel name must be unique. Although names can be up to 256 characters, some client applications have a limited display window when browsing the OPC server's tag space. The channel name is part of the OPC browser information. The property is required for creating a channel.

Tip: For information on reserved characters, refer to "How To... Properly Name a Channel, Device, Tag, and Tag Group" in the server help.

Description: Specify user-defined information about this channel.

Tip: Many of these properties, including Description, have an associated system tag.

Driver: Specify the protocol / driver for this channel. Specify the device driver that was selected during channel creation. It is a disabled setting in the channel properties. The property is required for creating a channel.

Note: With the server's online full-time operation, these properties can be changed at any time. This includes changing the channel name to prevent clients from registering data with the server. If a client has already acquired

an item from the server before the channel name is changed, the items are unaffected. If, after the channel name has been changed, the client application releases the item and attempts to re-acquire using the old channel name, the item is not accepted. Changes to the properties should not be made once a large client application has been developed. Utilize proper user role and privilege management to prevent operators from changing properties or accessing server features.

Diagnostics

Diagnostics Capture: When enabled, this option makes the channel's diagnostic information available to OPC applications. Because the server's diagnostic features require a minimal amount of overhead processing, it is recommended that they be utilized when needed and disabled when not. The default is disabled.


- **Note:** This property is not available if the driver or operating system does not support diagnostics.
- *For more information, refer to Communication Diagnostics and Statistics Tags in server help.*

Tag Counts

Static Tags: Provides the total number of defined static tags at this level (device or channel). This information can be helpful in troubleshooting and load balancing.

Channel Properties – Ethernet Communications

Ethernet Communication can be used to communicate with devices.

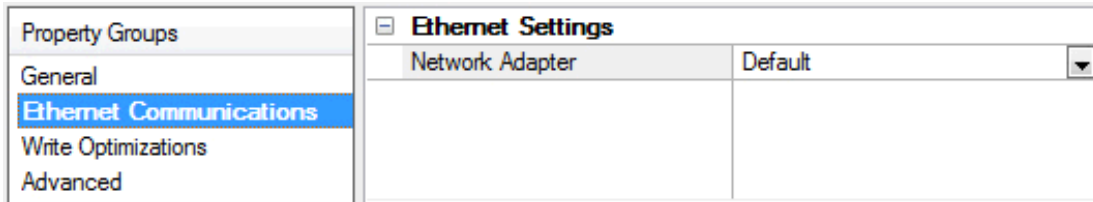


Ethernet Settings

Network Adapter: Specify the network adapter to bind. When left blank or Default is selected, the operating system selects the default adapter.

Channel Properties – Write Optimizations

The server must ensure that the data written from the client application gets to the device on time. Given this goal, the server provides optimization properties to meet specific needs or improve application responsiveness.

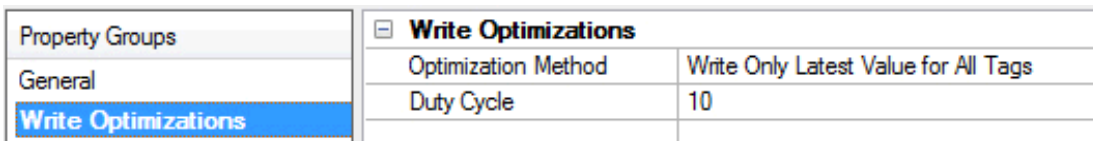

Write Optimizations

Optimization Method: Controls how write data is passed to the underlying communications driver. The options are:

- **Write All Values for All Tags:** This option forces the server to attempt to write every value to the controller. In this mode, the server continues to gather write requests and add them to the server's internal write queue. The server processes the write queue and attempts to empty it by writing data to the device as quickly as possible. This mode ensures that everything written from the client applications is sent to the target device. This mode should be selected if the write operation order or the write item's content must uniquely be seen at the target device.
- **Write Only Latest Value for Non-Boolean Tags:** Many consecutive writes to the same value can accumulate in the write queue due to the time required to actually send the data to the device. If the server updates a write value that has already been placed in the write queue, far fewer writes are needed to reach the same final output value. In this way, no extra writes accumulate in the server's queue. When the user

stops moving the slide switch, the value in the device is at the correct value at virtually the same time. As the mode states, any value that is not a Boolean value is updated in the server's internal write queue and sent to the device at the next possible opportunity. This can greatly improve the application performance.

● **Note:** This option does not attempt to optimize writes to Boolean values. It allows users to optimize the operation of HMI data without causing problems with Boolean operations, such as a momentary push button.

- **Write Only Latest Value for All Tags:** This option takes the theory behind the second optimization mode and applies it to all tags. It is especially useful if the application only needs to send the latest value to the device. This mode optimizes all writes by updating the tags currently in the write queue before they are sent. This is the default mode.

Duty Cycle: is used to control the ratio of write to read operations. The ratio is always based on one read for every one to ten writes. The duty cycle is set to ten by default, meaning that ten writes occur for each read operation. Although the application is performing a large number of continuous writes, it must be ensured that read data is still given time to process. A setting of one results in one read operation for every write operation. If there are no write operations to perform, reads are processed continuously. This allows optimization for applications with continuous writes versus a more balanced back and forth data flow.

● **Note:** It is recommended that the application be characterized for compatibility with the write optimization enhancements before being used in a production environment.

Channel Properties – Advanced

This group is used to specify advanced channel properties. Not all drivers support all properties; so the Advanced group does not appear for those devices.

Property Groups	<input type="checkbox"/> Non-Normalized Float Handling	
General	Floating-Point Values	Replace with Zero
Write Optimizations	<input type="checkbox"/> Inter-Device Delay	
Advanced	Inter-Device Delay (ms)	0

Non-Normalized Float Handling: A non-normalized value is defined as Infinity, Not-a-Number (NaN), or as a Denormalized Number. The default is Replace with Zero. Drivers that have native float handling may default to Unmodified. Non-normalized float handling allows users to specify how a driver handles non-normalized IEEE-754 floating point data. Descriptions of the options are as follows:

- **Replace with Zero:** This option allows a driver to replace non-normalized IEEE-754 floating point values with zero before being transferred to clients.
- **Unmodified:** This option allows a driver to transfer IEEE-754 denormalized, normalized, non-number, and infinity values to clients without any conversion or changes.

● **Note:** This property is disabled if the driver does not support floating-point values or if it only supports the option that is displayed. According to the channel's float normalization setting, only real-time driver tags (such as values and arrays) are subject to float normalization. For example, EFM data is not affected by this setting.

● *For more information on the floating-point values, refer to "How To ... Work with Non-Normalized Floating-Point Values" in the server help.*

Inter-Device Delay: Specify the amount of time the communications channel waits to send new requests to the next device after data is received from the current device on the same channel. Zero (0) disables the delay.

● **Note:** This property is not available for all drivers, models, and dependent settings.

Device Properties – General

A device represents a single target on a communications channel. If the driver supports multiple controllers, users must enter a device ID for each controller.

<table border="1"> <tr><td>Property Groups</td></tr> <tr><td>General</td></tr> </table>	Property Groups	General	<table border="1"> <tr><td>Identification</td></tr> <tr><td>Name</td><td></td></tr> <tr><td>Description</td><td></td></tr> <tr><td>Channel Assignment</td><td></td></tr> <tr><td>Driver</td><td></td></tr> <tr><td>Model</td><td></td></tr> <tr><td>ID Format</td><td>Decimal</td></tr> <tr><td>ID</td><td>2</td></tr> </table>	Identification	Name		Description		Channel Assignment		Driver		Model		ID Format	Decimal	ID	2
Property Groups																		
General																		
Identification																		
Name																		
Description																		
Channel Assignment																		
Driver																		
Model																		
ID Format	Decimal																	
ID	2																	

Identification

Name: Specify the name of the device. It is a logical user-defined name that can be up to 256 characters long and may be used on multiple channels.

Note: Although descriptive names are generally a good idea, some OPC client applications may have a limited display window when browsing the OPC server's tag space. The device name and channel name become part of the browse tree information as well. Within an OPC client, the combination of channel name and device name would appear as "ChannelName.DeviceName".

For more information, refer to "How To... Properly Name a Channel, Device, Tag, and Tag Group" in server help.

Description: Specify the user-defined information about this device.

Many of these properties, including Description, have an associated system tag.

Channel Assignment: Specify the user-defined name of the channel to which this device currently belongs.

Driver: Selected protocol driver for this device.

Model: Specify the type of device that is associated with this ID. The contents of the drop-down menu depend on the type of communications driver being used. Models that are not supported by a driver are disabled. If the communications driver supports multiple device models, the model selection can only be changed when there are no client applications connected to the device.

Note: If the communication driver supports multiple models, users should try to match the model selection to the physical device. If the device is not represented in the drop-down menu, select a model that conforms closest to the target device. Some drivers support a model selection called "Open," which allows users to communicate without knowing the specific details of the target device. *For more information, refer to the driver documentation.*

ID: Specify the device's driver-specific station or node. The type of ID entered depends on the communications driver being used. For many communication drivers, the ID is a numeric value. Drivers that support a Numeric ID provide users with the option to enter a numeric value whose format can be changed to suit the needs of the application or the characteristics of the selected communications driver. The format is set by the driver by default. Options include Decimal, Octal, and Hexadecimal.

Note: If the driver is Ethernet-based or supports an unconventional station or node name, the device's TCP/IP address may be used as the device ID. TCP/IP addresses consist of four values that are separated by periods, with each value in the range of 0 to 255. Some device IDs are string based. There may be additional properties to configure within the ID field, depending on the driver.

Operating Mode

<table border="1"> <tr><td>Property Groups</td></tr> <tr><td>General</td></tr> </table>	Property Groups	General	<table border="1"> <tr><td>Identification</td></tr> <tr><td>Operating Mode</td></tr> <tr><td>Data Collection</td><td>Enable</td></tr> <tr><td>Simulated</td><td>No</td></tr> </table>	Identification	Operating Mode	Data Collection	Enable	Simulated	No
Property Groups									
General									
Identification									
Operating Mode									
Data Collection	Enable								
Simulated	No								

Data Collection: This property controls the device's active state. Although device communications are enabled by default, this property can be used to disable a physical device. Communications are not attempted when a device is disabled. From a client standpoint, the data is marked as invalid and write operations are not accepted. This property can be changed at any time through this property or the device system tags.

Simulated: Place the device into or out of Simulation Mode. In this mode, the driver does not attempt to communicate with the physical device, but the server continues to return valid OPC data. Simulated stops physical communications with the device, but allows OPC data to be returned to the OPC client as valid data. While in Simulation Mode, the server treats all device data as reflective: whatever is written to the simulated device is read back and each OPC item is treated individually. The data is not saved if the server removes the item (such as when the server is reinitialized). The default is No.

● **Notes:**

1. Updates are not applied until clients disconnect and reconnect.
 2. The System tag (_Simulated) is read only and cannot be written to for runtime protection. The System tag allows this property to be monitored from the client.
 3. In Simulation mode, the item's memory map is based on client update rate(s) (Group Update Rate for OPC clients or Scan Rate for native and DDE interfaces). This means that two clients that reference the same item with different update rates return different data.
 4. When a device is simulated, updates may not appear faster than one (1) second in the client.
- ◆ Simulation Mode is for test and simulation purposes only. It should never be used in a production environment.

Tag Counts

Property Groups	<input type="checkbox"/> Identification
General	<input type="checkbox"/> Operating Mode
	<input type="checkbox"/> Tag Counts
	Static Tags 130

Static Tags: Provides the total number of defined static tags at this level (device or channel). This information can be helpful in troubleshooting and load balancing.

Device Properties – Scan Mode

The Scan Mode specifies the subscribed-client requested scan rate for tags that require device communications. Synchronous and asynchronous device reads and writes are processed as soon as possible; unaffected by the Scan Mode properties.

Property Groups	<input type="checkbox"/> Scan Mode
General	Scan Mode Respect Client-Specified Scan Rate ▼
Scan Mode	Initial Updates from Cache Disable

Scan Mode: Specify how tags in the device are scanned for updates sent to subscribing clients. Descriptions of the options are:

- **Respect Client-Specified Scan Rate:** This mode uses the scan rate requested by the client.
- **Request Data No Faster than Scan Rate:** This mode specifies the value set as the maximum scan rate. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
 - **Note:** When the server has an active client and items for the device and the scan rate value is increased, the changes take effect immediately. When the scan rate value is decreased, the changes do not take effect until all client applications have been disconnected.
- **Request All Data at Scan Rate:** This mode forces tags to be scanned at the specified rate for subscribed clients. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
- **Do Not Scan, Demand Poll Only:** This mode does not periodically poll tags that belong to the device nor perform a read to get an item's initial value once it becomes active. It is the OPC client's responsibility to poll for updates, either by writing to the _DemandPoll tag or by issuing explicit device reads for individual items. *For more information, refer to "Device Demand Poll" in server help.*

- **Respect Tag-Specified Scan Rate:** This mode forces static tags to be scanned at the rate specified in their static configuration tag properties. Dynamic tags are scanned at the client-specified scan rate.

Initial Updates from Cache: When enabled, this option allows the server to provide the first updates for newly activated tag references from stored (cached) data. Cache updates can only be provided when the new item reference shares the same address, scan rate, data type, client access, and scaling properties. A device read is used for the initial update for the first client reference only. The default is disabled; any time a client activates a tag reference the server attempts to read the initial value from the device.

Device Properties – Timing

The device Timing properties allow the driver's response to error conditions to be tailored to fit the application's needs. In many cases, the environment requires changes to these properties for optimum performance. Factors such as electrically generated noise, modem delays, and poor physical connections can influence how many errors or timeouts a communications driver encounters. Timing properties are specific to each configured device.

Property Groups	☐ Communication Timeouts	
General	Connect Timeout (s)	3
Scan Mode	Request Timeout (ms)	1000
Timing	Attempts Before Timeout	3

Communications Timeouts

Connect Timeout: This property (which is used primarily by Ethernet based drivers) controls the amount of time required to establish a socket connection to a remote device. The device's connection time often takes longer than normal communications requests to that same device. The valid range is 1 to 30 seconds. The default is typically 3 seconds, but can vary depending on the driver's specific nature. If this setting is not supported by the driver, it is disabled.

● **Note:** Due to the nature of UDP connections, the connection timeout setting is not applicable when communicating via UDP.

Request Timeout: Specify an interval used by all drivers to determine how long the driver waits for a response from the target device to complete. The valid range is 50 to 9999999 milliseconds (167 minutes). The default is usually 1000 milliseconds, but can vary depending on the driver. The default timeout for most serial drivers is based on a baud rate of 9600 baud or better. When using a driver at lower baud rates, increase the timeout to compensate for the increased time required to acquire data.

Attempts Before Timeout: Specify how many times the driver issues a communications request before considering the request to have failed and the device to be in error. The valid range is 1 to 10. The default is typically 3, but can vary depending on the driver's specific nature. The number of attempts configured for an application depends largely on the communications environment. This property applies to both connection attempts and request attempts.

Timing

Inter-Request Delay: Specify how long the driver waits before sending the next request to the target device after receiving the response to the previous request. It overrides the normal polling frequency of tags associated with the device, as well as one-time reads and writes. This delay can be useful when dealing with devices with slow turn-around times and in cases where network load is a concern. Configuring a delay for a device affects communications with all other devices on the channel. It is recommended that users separate any device that requires an inter-request delay to a separate channel if possible. Other communications properties (such as communication serialization) can extend this delay. The valid range is 0 to 300,000 milliseconds; however, some drivers may limit the maximum value due to a function of their particular design. The default is 0, which indicates no delay between requests with the target device.

● **Note:** Not all drivers support Inter-Request Delay. This setting does not appear if it is not available.


Property Groups	<input checked="" type="checkbox"/> Timing	
General	Inter-Request Delay (ms)	0
Scan Mode		
Timing		

Device Properties – Auto-Demotion

The Auto-Demotion properties can temporarily place a device off-scan in the event that a device is not responding. By placing a non-responsive device offline for a specific time period, the driver can continue to optimize its communications with other devices on the same channel. After the time period has been reached, the driver re-attempts to communicate with the non-responsive device. If the device is responsive, the device is placed on-scan; otherwise, it restarts its off-scan time period.

Property Groups	<input checked="" type="checkbox"/> Auto-Demotion	
General	Demote on Failure	Enable
Scan Mode	Timeouts to Demote	3
Timing	Demotion Period (ms)	10000
Auto-Demotion	Discard Requests when Demoted	Disable

Demote on Failure: When enabled, the device is automatically taken off-scan until it is responding again.

 **Tip:** Determine when a device is off-scan by monitoring its demoted state using the `_AutoDemoted` system tag.


Timeouts to Demote: Specify how many successive cycles of request timeouts and retries occur before the device is placed off-scan. The valid range is 1 to 30 successive failures. The default is 3.

Demotion Period: Indicate how long the device should be placed off-scan when the timeouts value is reached. During this period, no read requests are sent to the device and all data associated with the read requests are set to bad quality. When this period expires, the driver places the device on-scan and allows for another attempt at communications. The valid range is 100 to 3600000 milliseconds. The default is 10000 milliseconds.

Discard Requests when Demoted: Select whether or not write requests should be attempted during the off-scan period. Disable to always send write requests regardless of the demotion period. Enable to discard writes; the server automatically fails any write request received from a client and does not post a message to the Event Log.


Device Properties – Tag Generation

The automatic tag database generation features make setting up an application a plug-and-play operation. Select communications drivers can be configured to automatically build a list of tags that correspond to device-specific data. These automatically generated tags (which depend on the nature of the supporting driver) can be browsed from the clients.

 *Not all devices and drivers support full automatic tag database generation and not all support the same data types. Consult the data types descriptions or the supported data type lists for each driver for specifics.*

If the target device supports its own local tag database, the driver reads the device's tag information and uses the data to generate tags within the server. If the device does not natively support named tags, the driver creates a list of tags based on driver-specific information. An example of these two conditions is as follows:

1. If a data acquisition system supports its own local tag database, the communications driver uses the tag names found in the device to build the server's tags.
2. If an Ethernet I/O system supports detection of its own available I/O module types, the communications driver automatically generates tags in the server that are based on the types of I/O modules plugged into the Ethernet I/O rack.

 **Note:** Automatic tag database generation's mode of operation is completely configurable. *For more information, refer to the property descriptions below.*

Property Groups	<input type="checkbox"/> Tag Generation	
General	On Device Startup	Do Not Generate on Startup
Timing	On Duplicate Tag	Delete on Create
Auto-Demotion	Parent Group	
Tag Generation	Allow Automatically Generated Subgroups	Enable
Communications	Create	Create tags
Redundancy		

On Property Change: If the device supports automatic tag generation when certain properties change, the **On Property Change** option is shown. It is set to **Yes** by default, but it can be set to **No** to control over when tag generation is performed. In this case, the **Create tags** action must be manually invoked to perform tag generation. To invoke via the Configuration API service, access `/config/v1/project/channels/{name}/devices/{name}/services/TagGeneration`.

On Device Startup: Specify when OPC tags are automatically generated. Descriptions of the options are as follows:

- **Do Not Generate on Startup:** This option prevents the driver from adding any OPC tags to the tag space of the server. This is the default setting.
- **Always Generate on Startup:** This option causes the driver to evaluate the device for tag information. It also adds tags to the tag space of the server every time the server is launched.
- **Generate on First Startup:** This option causes the driver to evaluate the target device for tag information the first time the project is run. It also adds any OPC tags to the server tag space as needed.

● **Note:** When the option to automatically generate OPC tags is selected, any tags that are added to the server's tag space must be saved with the project. Users can configure the project to automatically save from the **Tools | Options** menu.

On Duplicate Tag: When automatic tag database generation is enabled, the server needs to know what to do with the tags that it may have previously added or with tags that have been added or modified after the communications driver since their original creation. This setting controls how the server handles OPC tags that were automatically generated and currently exist in the project. It also prevents automatically generated tags from accumulating in the server.

For example, if a user changes the I/O modules in the rack with the server configured to **Always Generate on Startup**, new tags would be added to the server every time the communications driver detected a new I/O module. If the old tags were not removed, many unused tags could accumulate in the server's tag space. The options are:

- **Delete on Create:** This option deletes any tags that were previously added to the tag space before any new tags are added. This is the default setting.
- **Overwrite as Necessary:** This option instructs the server to only remove the tags that the communications driver is replacing with new tags. Any tags that are not being overwritten remain in the server's tag space.
- **Do not Overwrite:** This option prevents the server from removing any tags that were previously generated or already existed in the server. The communications driver can only add tags that are completely new.
- **Do not Overwrite, Log Error:** This option has the same effect as the prior option and also posts an error message to the server's Event Log when a tag overwrite would have occurred.

● **Note:** Removing OPC tags affects tags that have been automatically generated by the communications driver as well as any tags that have been added using names that match generated tags. Users should avoid adding tags to the server using names that may match tags that are automatically generated by the driver.

Parent Group: This property keeps automatically generated tags from mixing with tags that have been entered manually by specifying a group to be used for automatically generated tags. The name of the group can be up to 256 characters. This parent group provides a root branch to which all automatically generated tags are added.

Allow Automatically Generated Subgroups: This property controls whether the server automatically creates subgroups for the automatically generated tags. This is the default setting. If disabled, the server generates the device's tags in a flat list without any grouping. In the server project, the resulting tags are named with the address value. For example, the tag names are not retained during the generation process.

● **Note:** If, as the server is generating tags, a tag is assigned the same name as an existing tag, the system automatically increments to the next highest number so that the tag name is not duplicated. For example, if the generation process creates a tag named "AI22" that already exists, it creates the tag as "AI23" instead.

Create: Initiates the creation of automatically generated OPC tags. If the device's configuration has been modified, **Create tags** forces the driver to reevaluate the device for possible tag changes. Its ability to be accessed from the System tags allows a client application to initiate tag database creation.

● **Note:** **Create tags** is disabled if the Configuration edits a project offline.

Automatic Tag Database Generation

This driver's Automatic OPC Tag Database Generation features have been designed to make configuring the OPC application a plug-and-play operation. This driver can be configured to automatically build a list of OPC tags within the OPC Server that correspond to device-specific data. The automatically-generated OPC tags can then be browsed from the OPC client.

The OPC tags that are generated depend on the nature of the driver. If the target device supports its own local tag database, the driver will read the device's tag information and then use this data to generate OPC tags within the OPC Server. If the device does not natively support its own named tags, the driver will create a list of tags based on driver-specific information. An example of these two conditions is as follows:

1. A data acquisition system that supports its own local tag database. The driver will use the tags names found in the device to build the OPC Server's OPC tags.
2. An Ethernet I/O system that supports the detection of an I/O module type. The driver will automatically generate OPC tags in the OPC Server that are based on the types of I/O modules plugged into the Ethernet I/O rack.

Automatic Tag Database Generation is completely configurable. The following dialog is used to define how the OPC Server and the associated communications driver will handle Automatic OPC Tag Database Generation:

Tag Generation	
On Device Startup	Do Not Generate on Startup
On Duplicate Tag	Delete on Create
Parent Group	
Allow Automatically Generated Subgroups	Enable
Create	Create tags

Under **Tag Generation** the **On Device Startup** property is used to configure when tags are automatically generated.

- **Do Not Generate on Startup:** This options prevents the driver from adding any OPC tags to the OPC Server's tag space. This is the default condition.
- **Always Generate on Startup:** This option causes the driver to always evaluate the device for tag information. OPC tags will be added to the tag space of the server each time the server is launched.
- **Generate on First Startup:** This option causes the driver to evaluate the target device for tag information the first time this OPC Server project is run. OPC tags will be added to the server tag space as needed.

● **Note:** Any tags that are added to the server's tag space must be saved with the project. The OPC Server project can be configured to automatically save from the **Tools | Options** menu.

When automatic tag generation is enabled, the server needs to know what to do with the OPC tags that it may have added from previous runs (or with OPC tags that have been added or modified after the communications driver added them originally). The selection **Perform the following action** controls how the server will handle OPC tags that were automatically generated and currently exist in the OPC Server project. This feature prevents automatically-generated tags from piling up in the server. In the Ethernet I/O example above, this would occur if users continued to change the I/O modules in the rack while the OPC Server was configured to always generate new OPC tags on startup. Under this condition, tags would be added to the server every time the communications driver detected a new I/O module. If the old tags are not removed, a number of unused tags could accumulate in the server's tag space. Descriptions of the selections are as follows:


- **Delete on Create:** This option allows the server to remove any tags that had previously been added to the tag space before any new tags can be added by the communications driver. This is the default setting.

- **Overwrite as Necessary:** This option allows the server to only remove tags that the communications driver is replacing with new tags. Any tags that are not being overwritten will remain in the server's tag space.
- **Do not Overwrite:** This option prevents the server from removing any tags that had been previously generated or may have already existed in the server. With this selection, the communications driver can only add tags that are completely new.
- **Do not Overwrite, Log Error:** This option has the same effect as the third option, but also posts an error message in the OPC Server's Event Log when a tag overwrite would have occurred.


Note: The removal of OPC tags not only affects tags that have been automatically generated by the communications driver, but also any tags that have been added using names that match generated tags. It is recommended that users avoid adding tags to the server using names that match tags that may be automatically generated by the driver.

Allow Automatically Generated Subgroups can be used to keep automatically-generated tags from mixing with tags that have been entered manually. This parameter specifies a sub group that will be used when adding all automatically-generated tags for this device. The name of the sub group can be up to 31 characters in length. The following image displays demonstrate how this parameter affects where automatically-generated tags are placed in the server's tag space. It provides a root branch to which all automatically-generated tags will be added.

No sub group specified

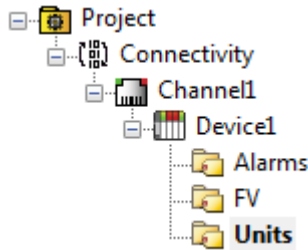

Sub group named MyGroup specified

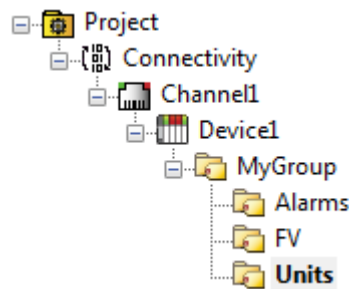

Auto Create manually initiates the creation of automatically-generated OPC tags, and also forces the communications driver to reevaluate the device for possible tag changes. It can be accessed from the System Tags, thus allowing the OPC client application to initiate tag database creation.

Device Properties – Device Configuration

Property Groups General Scan Mode Timing Auto-Demotion Tag Generation Device Configuration Redundancy	<table border="1"> <tr> <td colspan="2">General</td> </tr> <tr> <td>Port</td> <td>Ethernet</td> </tr> <tr> <td>Special Data Handling</td> <td>None</td> </tr> <tr> <td>Polling Interval (ms)</td> <td>1000</td> </tr> <tr> <td>Start Math on Start</td> <td>Disable</td> </tr> <tr> <td colspan="2">Time Settings</td> </tr> <tr> <td>Date and Time</td> <td>Device Time</td> </tr> <tr> <td>Date Format</td> <td>MM/DD/YY</td> </tr> <tr> <td>Set Clock on Start</td> <td>Disable</td> </tr> <tr> <td colspan="2">Tagnames</td> </tr> <tr> <td>Generate Tag Database Using</td> <td>Physical Channel Number</td> </tr> <tr> <td colspan="2">Login</td> </tr> <tr> <td>Username</td> <td>user</td> </tr> <tr> <td>Password</td> <td>*****</td> </tr> <tr> <td>User Id</td> <td></td> </tr> <tr> <td>User Function</td> <td>Monitor</td> </tr> </table>	General		Port	Ethernet	Special Data Handling	None	Polling Interval (ms)	1000	Start Math on Start	Disable	Time Settings		Date and Time	Device Time	Date Format	MM/DD/YY	Set Clock on Start	Disable	Tagnames		Generate Tag Database Using	Physical Channel Number	Login		Username	user	Password	*****	User Id		User Function	Monitor
General																																	
Port	Ethernet																																
Special Data Handling	None																																
Polling Interval (ms)	1000																																
Start Math on Start	Disable																																
Time Settings																																	
Date and Time	Device Time																																
Date Format	MM/DD/YY																																
Set Clock on Start	Disable																																
Tagnames																																	
Generate Tag Database Using	Physical Channel Number																																
Login																																	
Username	user																																
Password	*****																																
User Id																																	
User Function	Monitor																																

General

Port: Specify the port number that the remote device will use. This driver only uses the Ethernet Exclusive port (number 34260) and requires Winsock V1.1 or higher.

Special Data Handling: Specify how the driver will return specific data values for numerical out of range and error conditions from the device. Options include None, +INF, and -INF. The default setting is None.

- **None:** When selected, special data values will be returned with the actual data value received from the device. For example, the data value of a measuring channel Over Range would be returned as 32,767 and the data value of a math channel Over Range would be returned as 2,147,450,879.
- **+INF:** When selected, special data values will be returned as a numerical representation of positive infinity (#INF). The exception is an Under Range condition that is always returned as negative infinity.
- **-INF:** When selected, special data values will be returned as a numerical representation of negative infinity (-#INF). The exception is an Over Range condition that is always returned as positive infinity.

Polling Interval (ms): Specify a fixed time interval for all communications with a device. It can be used to prevent the driver from making excessive requests to the device, and to prevent the OPC client from forcing the driver to run at its maximum update rate.

Start Math on Start: When Enabled, this option informs the driver to send a command to the device at communication startup that will start the math computation. The default setting is Disabled.

Time Settings

Date and Time: Specify the origin of the data value of the Date and Time data types (which represent the date and time of the latest data). Options include Device Time and System Time. The default setting is Device Time. Descriptions of the options are as follows:

- **Device Time:** When selected, the Date and Time tags will return the date and time read from the device. This date and time represents the date and time that the latest data was measured or computed based on the internal device clock.
- **System Time:** When selected, the Date and Time tags will return the date and time that the requested data was returned from the device based on the internal system clock.

Date Format: Specify the format of the return string for the Date data type. Options include MM/DD/YY (month/day/year), YY/MM/DD (year/month/day), or DD/MM/YY (day/month/year). The default setting is MM/DD/YY.

Set Clock on Start: When Enabled, this option informs the driver to send a command to the device at communication startup that will set the device clock to the date and time settings of the system clock. The default setting is Disabled.

Tagnames

Generate Tag Database Using: Specify the origin of the tag name used when automatically generating a tag database. Options include Physical Channel Number and Device Tagname. The default setting is Physical Channel Number. Descriptions of the options are as follows:

- **Physical Channel Number:** When selected, the driver will generate tag names based on the channel number of an item. For example, "CH01" or "CH01_alarm1".
- **Device Tagname:** When selected, the driver will generate tag names using the tag name returned by the device for a channel. For example, "Flow" or "Flow_alarm1".

Login

Username: Specify the registered user name. If the device is configured with the login function enabled, only users that are registered can login to the DXP. The username is case sensitive.

● **Note:** Users must specify a user level to communicate with DXP devices regardless of whether it is configured with the login function disabled. Enter the username to indicate the user level. In this case, a password is not required.

Password: Specify the username's registered password for when the device is configured with the login function enabled.

● **Note:** Password entry is not displayed on the screen.

User ID: Specify the unique User ID required for DXP device login. The default setting is blank.

User Function: Specify the type of mode used to login to a DXP device. The default setting is **Monitor**. Descriptions of the modes are as follows:

- **Monitor:** allows users to read all accessible data while allowing full operator access to the device through the front panel of the unit.
- **Setting:** allows users to read all accessible data and to write to Read / Write accessible tags; however, the front panel of the unit will be locked. This mode should only be selected when users want to write data to the device; otherwise, users should select Monitor to maintain operability of the unit front panel.

● **Note:** This property may be changed while the server is connected.

Device Properties – Redundancy

Property Groups	<input type="checkbox"/> Redundancy	
General	Secondary Path	Channel.Device1 ...
Scan Mode	Operating Mode	Switch On Failure
Timing	Monitor Item	
Auto-Demotion	Monitor Interval (s)	300
Redundancy	Return to Primary ASAP	Yes


Redundancy is available with the Media-Level Redundancy Plug-In.

● Consult the website, a sales representative, or the [user manual](#) for more information.


Optimizing Communications

The Yokogawa DXP Driver has been designed to provide the best performance with the least amount of impact on the system's overall performance. While the Yokogawa DXP Driver is fast, there are a couple of guidelines that can be used to control and optimize the application and gain maximum performance.

This server refers to communications protocols like Yokogawa DXP Ethernet Device as a channel. Each channel defined in the application represents a separate path of execution in the server. Once a channel has been defined, a series of devices must then be defined under that channel. Each of these devices represents a single Ethernet device from which data will be collected. While this approach to defining the application will provide a high level of performance, it won't take full advantage of the Yokogawa DXP Driver or the network. An example of how the application may appear when configured using a single channel is shown below.

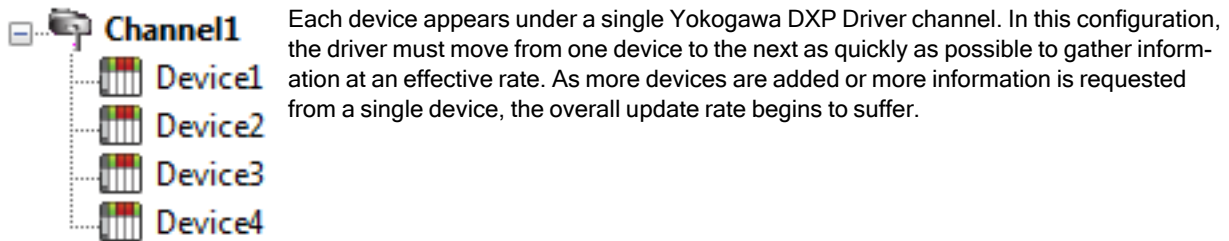

If the Yokogawa DXP Driver could only define one single channel, then the example shown above would be the only option available; however, the Yokogawa DXP Driver can define up to 100 channels. Using multiple channels distributes the data collection workload by simultaneously issuing multiple requests to the network. An example of how the same application may appear when configured using multiple channels to improve performance is shown below.

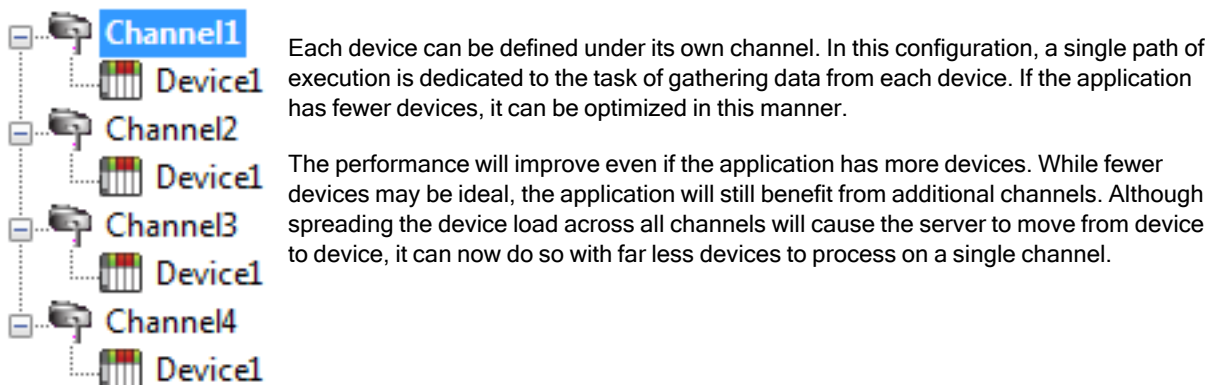

Data Types Descriptions

Data Type	Description
Boolean	Single bit
Byte	Unsigned 8-bit value
Word	Unsigned 16-bit value
Short	Signed 16-bit value
Float	32-bit floating point value
Double	64-bit floating point value
String	Null-terminated ASCII string

Address Descriptions

Address specifications vary depending on the model in use. Select a link from the following list to obtain specific address information for the model of interest.

[DXP100 Addressing](#)

[DXP200 Addressing](#)

DXP100 Addressing

The driver supports the following addresses for this device. The default data type for each address type is indicated in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-12	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-12	Short , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-12	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-12	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-12	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-12	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-12	Double , Float	Read / Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-12	Double , Float	Read / Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-12	Double , Float	Read / Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-12	Double , Float	Read / Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-12	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-12	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-12	String	Read Only
Tagname of Channel*	CHxx.tag	01-12	String	Read Only
Status of Channel*	CHxx.status	01-12	String	Read Only
Precision of Channel*	CHxx.Precision	01-12	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of	CHxx or CHxx.PV	31-42	Double , Float	Read Only

Address Type	Format	Range	Data Types	Access
Math Channel				
Alarm Summary of Math Channel	CHxx.Alarm	31-42	Short , Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-42	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-42	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-42	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-42	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-42	Double , Float	Read / Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-42	Double , Float	Read / Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-42	Double , Float	Read / Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-42	Double , Float	Read / Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-42	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-42	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-42	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-42	String	Read Only
Status of Math Channel*	CHxx.status	31-42	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-42	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*Data associated with these addresses will only be read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level; otherwise, they will return an error.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-12	Float	Read / Write
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read / Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Note: Administrative privileges are not allowed on DXP models.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level; otherwise, they will return an error.

Model Name of Device

The Model address type will have a string value of 'DXP100' or 'DXP200', indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level; otherwise, write operations will return an error.

Caution: Perform Write operations using the Command address with caution.

Notes:

1. The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

- Addresses that have Write Only access are assigned a default access of Read / Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

DXP200 Addressing

The driver supports the following addresses for this device. The default data type for each address type is indicated in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-30	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-30	Short , Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-30	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-30	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-30	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-30	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-30	Double , Float	Read / Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-30	Double , Float	Read / Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-30	Double , Float	Read / Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-30	Double , Float	Read / Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-30	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-30	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-30	String	Read Only
Tagname of Channel*	CHxx.tag	01-30	String	Read Only
Status of Channel*	CHxx.status	01-30	String	Read Only
Precision of Channel*	CHxx.Precision	01-30	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read / Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read / Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read / Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read / Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*Data associated with these addresses will only be read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, a non-zero value must be written to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

Alarm Setpoints

Data values for Alarm Setpoints that are undefined in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device. Write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level; otherwise, they will return an error.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that do not support tag names and channels that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Math Communication Data	CDxx	01-30	Float	Read / Write
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read / Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

● **Note:** Administrative privileges are not allowed on DXP models.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level; otherwise, they will return an error.

Model Name of Device

The Model address type will have a string value of 'DXP100' or 'DXP200', indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level; otherwise, write operations will return an error.

● **Caution:** Perform Write operations using the Command address with caution.

● **Notes:**

1. The actual number of addresses available for of each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.
2. Addresses that have Write Only access are assigned a default access of Read / Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

Error Descriptions

The following error/warning messages may be generated. Click on the link for a description of the message.

Address Validation

Address '<address>' is out of range for the specified device or register

Data Type '<type>' is not valid for device address '<address>'

Device address '<address>' contains a syntax error

Device address '<address>' is Read Only

Missing address

Device Status Messages

Device '<device name>' is not responding

Unable to write to '<address>' on device '<device name>'

Write allowed for admin level only (Device '<device-name>', Tag '<address>')

Write allowed for devices with math option only (Device '<device-name>', Tag '<address>')

Driver Error Messages

Winsock initialization failed (OS Error = n)

Winsock V1.1 or higher must be installed to use the Yokogawa DXP Ethernet Device Driver

Automatic Tag Database Generation Messages

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed. Check username and password

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed. No more logins at this user level

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' not accepted. Choose username of 'admin' or 'user'

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' responded with error '<error code>'

Address '<address>' is out of range for the specified device or register

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically references a location that is beyond the range of supported locations for the device.

Solution:

Verify that the address is correct; if it is not, re-enter it in the client application.

Data Type '<type>' is not valid for device address '<address>'

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has been assigned an invalid data type.

Solution:

Modify the requested data type in the client application.

Device address '<address>' contains a syntax error

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically contains one or more invalid characters.

Solution:

Re-enter the address in the client application.

Device address '<address>' is Read Only

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has a requested access mode that is not compatible with what the device supports for that address.

Solution:

Change the access mode in the client application.

Missing address

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has no length.

Solution:

Re-enter the address in the client application.

Device '<device name>' is not responding

Error Type:

Serious

Possible Cause:

1. The connection between the device and the Host PC is broken.
2. The IP address assigned to the device is incorrect.
3. The connection cannot be established in the specified timeout period.
4. The response from the device took longer to receive than the amount of time specified in the "Request Timeout" device property.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify the IP address given to the named device matches that of the actual device.
3. Increase the Connect Timeout value in the Timeout property group of Device Properties.
4. Increase the Request Timeout property so that the entire response can be handled.

Unable to write to '<address>' on device '<device name>'**Error Type:**

Serious

Possible Cause:

1. The connection between the device and the Host PC is broken.
2. The named device may have been assigned an incorrect IP address.
3. The address specified may be Read Only or may not exist in the current device.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify the IP address given to the named device matches that of the actual device.
3. Check address availability for the device.

Write allowed for admin level only**Error Type:**

Warning

Possible Cause:

The user is logged on to the named device at the user level and is attempting to write to a tag that is writeable at the administrator level only.

Solution:

Verify the user/admin level used for login.

Note:

Administrative privileges are not allowed on DXP models.

Write allowed for devices with math option only**Error Type:**

Warning

Possible Cause:

A write was attempted to a tag that is available for math operations only; however, the named device is not equipped with the math option.

Solution:

Verify that the tag address exists for the device.

Winsock initialization failed (OS Error = n)**Error Type:**

Fatal

OS Error	Indication	Possible Solution
10091	Indicates that the underlying network subsystem is not ready for network communication.	Wait a few seconds and restart the driver.
10067	Limit on the number of tasks supported by the Windows Sockets implementation has been reached.	Close one or more applications that may be using Winsock and restart the driver.

Winsock V1.1 or higher must be installed to use the Yokogawa DXP Ethernet Device Driver**Error Type:**

Fatal

Possible Cause:

The version number of the Winsock DLL found on the system is less than 1.1.

Solution:

Upgrade Winsock to version 1.1 or higher.

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed. Check username and password**Error Type:**

Serious

Possible Cause:

1. The username and password required for login to the device have not been specified in Device Configuration.
2. The username and password were entered incorrectly or entered in non-matching case.
3. The username and/or password specified in Device Configuration is not registered in the device.

Solution:

Re-enter the correct username and password in Device Configuration.

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed. No more logins at this user level**Error Type:**

Serious

Possible Cause:

There are no more users permitted to login at this user level. Other users may be connected to the device, or a connection may have been made and broken without logging off or disconnecting.

Solution:

1. Check for other user connections that are blocking connection.
2. Make sure that the Keep Alive feature for Ethernet communications is enabled in the device. This will cause the device to disconnect if there is a break in communications.

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login not accepted. Choose username of 'admin' or 'user'

Error Type:

Serious

Possible Cause:

1. The password protected login feature of the device is disabled and the username specified in Device Configuration does not contain the expected user level required for login to the device.
2. The user level was entered incorrectly or entered in non-matching case.

Solution:

Re-enter the correct user level 'user' in the username field in Device Configuration.

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' responded with error '<error code>'

Error Type:

Serious

Possible Cause:

Please see the instruction manual corresponding to the device model for an explanation of the error code.

Solution:

The solution depends on the error code. Please see the instruction manual corresponding to the device model for an explanation of the error code.

Index

A

- Address '<address>' is out of range for the specified device or register 25
- Address Descriptions 18
- Allow Sub Groups 12
- Attempts Before Timeout 10
- Auto-Demotion 11
- Automatic Tag Database Generation 13

B

- Boolean 17

C

Channel Assignment 8
Channel Properties – Advanced 7
Channel Properties – Ethernet Communications 6
Channel Properties – General 5
Channel Properties – Write Optimizations 6
Communications Timeouts 10
Connect Timeout 10
Create 13

D

Data Collection 8
Data Type '<type>' is not valid for device address '<address>' 25
Data Types Description 17
Delete 12
Demote on Failure 11
Demotion Period 11
Device '<device name>' is not responding 25
Device address '<address>' contains a syntax error 25
Device address '<address>' is Read Only 25
Device Configuration 14
Device ID 5
Device Properties – Auto-Demotion 11
Device Properties – General 7
Device Properties – Redundancy 16
Device Properties – Tag Generation 11
Device Properties – Timing 10
Diagnostics 6
Discard Requests when Demoted 11
Do Not Scan, Demand Poll Only 9
Driver 8
Duty Cycle 7
DXP100 Addressing 18
DXP200 Addressing 21

E

Error Descriptions 23
Ethernet Settings 6

F

Float 17

G

General 7

Generate 12

I

ID 8

Identification 5, 8

Initial Updates from Cache 10

Inter-Device Delay 7

M

Missing address 25

Model 8

N

Name 8

Network Adapter 6

Non-Normalized Float Handling 7

O

On Device Startup 12

On Duplicate Tag 12

On Property Change 12

Operating Mode 8

Optimization Method 6

Optimizing Communications 17

Overview 4

Overwrite 12

P

Parent Group 12

R

Redundancy 16

Replace with Zero 7

Request Timeout 10

Respect Tag-Specified Scan Rate 10

S

Scan Mode 9

Setup 5

Short 17

Simulated 9

T

Tag Counts 6, 9

Tag Generation 11

Timeouts to Demote 11

Timing 10

U

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed.
Check username and password 27

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login failed.
No more logins at this user level 27

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' login not
accepted. Choose username of 'admin' or 'user' 28

Unable to generate a tag database for device '<device name>'. Reason: Device '<device name>' responded
with error '<error code>' 28

Unable to write tag '<address>' on device '<device name>' 26

Unmodified 7

W

Winsock initialization failed (OS Error = n) 27

Winsock V1.1 or higher must be installed to use the Yokogawa DXP Ethernet device driver 27

Word 17

Write All Values for All Tags 6

Write allowed for admin level only 26

Write allowed for devices with math option only 26

Write Only Latest Value for All Tags 7

Write Only Latest Value for Non-Boolean Tags 7